




Gigacenter - Getting Started Guide

1

Locate your Gigacenter

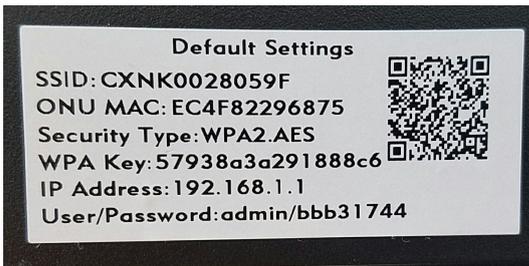

- Locate the Default Settings sticker located on the front of your Gigacenter
- This will provide you with the default configuration that's been applied to your Gigacenter.

Note - the default IP Address is 192.168.222.1 instead of 192.168.1.1 displayed on sticker

2

Connect a WiFi device

- From your WiFi device, open the WiFi settings
- Select the SSID from the Default Settings sticker in Step 1
- When prompted for the WiFi security key, enter that from the Default Settings sticker in Step 1



3

Connect a wired device


- Your Gigacenter has 4 Gigabit Ethernet LAN ports for all your wired devices. These are the ports in Yellow on the side of the Gigacenter
- If your device is setup for DHCP, plug it in and you're ready to get connected to the Internet!



4

Custom configuration

- If you need to apply some custom settings, such as renaming the Wifi SSIDs, adding a guest Wifi, or changing the LAN settings you can do that and more through the Web interface.
- From a device connected to the gigacenter (wifi or Ethernet) browse to <https://192.168.222.1>

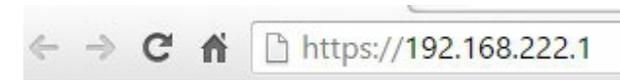

- Enter the User/Password from the Default Settings sticker in Step 1
- Make the changes by selecting the appropriate settings from the intuitive user interface (UI).
- Please see our comprehensive user guide for detailed instructions on the Gigacenter settings by visiting <https://support.secom.net> and search Gigacenter

5

Still need help?

- Did the above information not answer your question? No problem, feel free to contact our support by emailing support@secom.net or calling 1-800-657-7149

